



I M P O R T A N T
care
and
maintenance

SLIM
Concealed
Thermostatic
Shower
Valve

**Please leave this booklet
with the customer
for future use**


www.cifial.co.uk
sales@cifial.co.uk

CIFIAL®

IMPORTANT - PRIOR TO USE


SETTING THE TEMPERATURE

Step 1

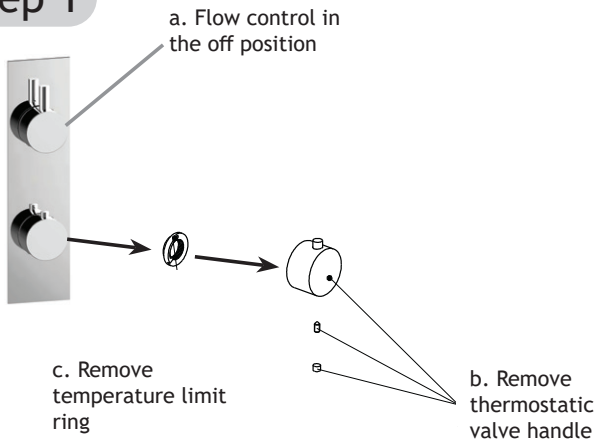


- Ensure the flow control is in the OFF position.
- Remove the thermostatic valve handle.
- Remove the temperature limit ring

Step 2

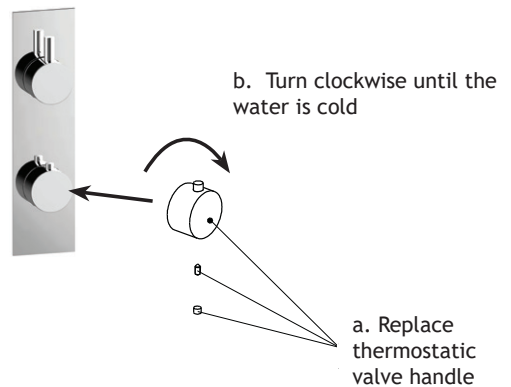


- Replace the thermostatic valve handle.
- Turn the thermostatic valve handle clockwise until the water is cold

Step 3

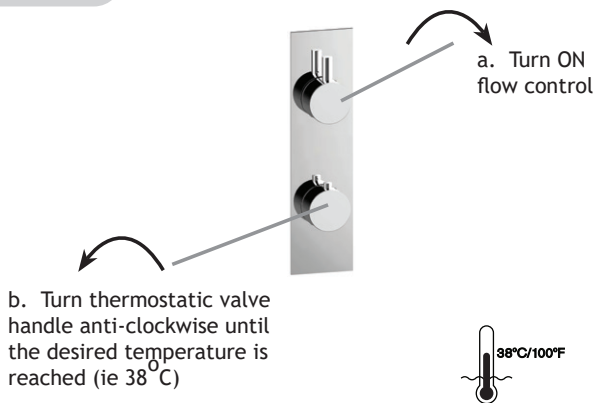


- Turn ON flow control
- Turn the thermostatic valve handle anti-clockwise until the desired temperature is reached, is 38°C. Use a thermometer to check if the temperature is correct.

Step 4

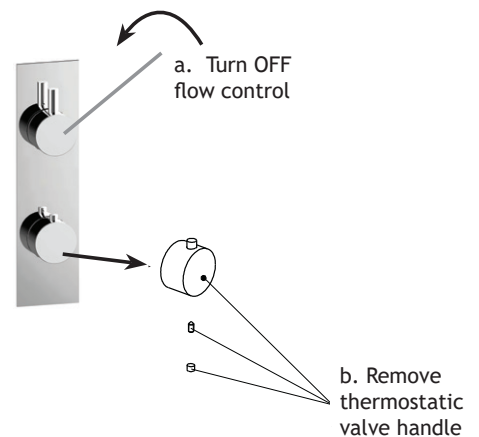


- Turn OFF flow control.
- Remove the thermostatic valve handle.

Step 5

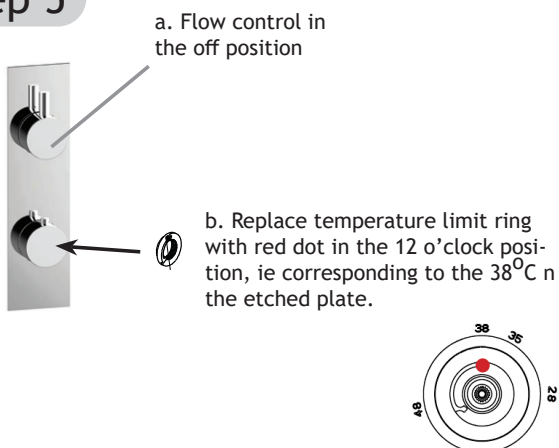

- Ensure the flow control is still in the OFF position
- Replace the temperature limit ring with the red dot in the 12 o'clock position, ie corresponding with 38°C on the etched plate

Step 6

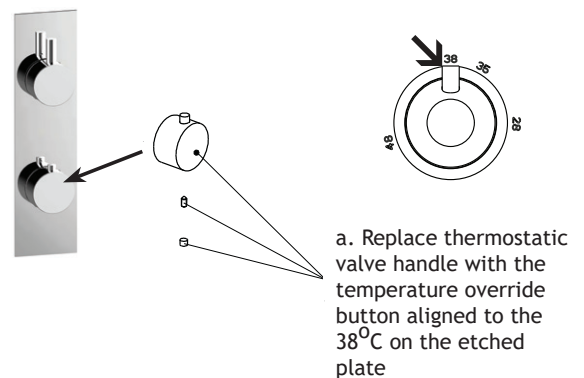

- Replace thermostatic valve handle with the temperature override button aligned to the 38°C on the etched plate.
YOUR VALVE IS NOW READY FOR USE.

ON-GOING MAINTENANCE

To prevent the build up of limescale and water impurities, especially in hard water areas, it is recommended to follow these procedures:


1) On a monthly basis the thermostatic control handle should be rotated between the maximum and minimum limits by pressing the override button and with the water running.

2) Should the thermostatic cartridge not function properly the most likely cause is the build up of limescale/water impurities.

To clean the cartridge:
part number 5711608


Step 1. Shut off both the hot & cold water supply to the thermostatic valve

Step 1

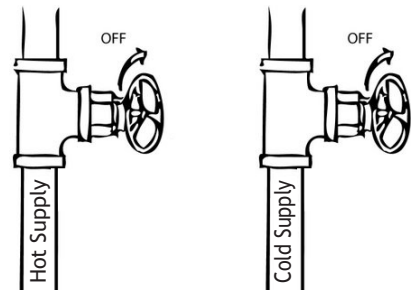


Step 2. Remove the thermostatic valve handle, limit ring, and thermostatic cartridge sleeve

Step 2

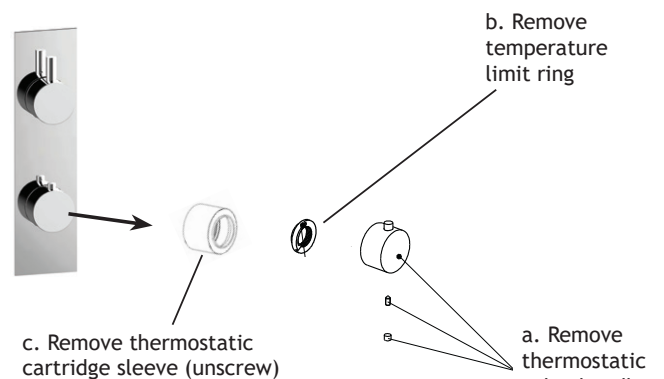

Step 3. Using a 30mm spanner, unscrew the thermostatic cartridge nut anti-clockwise and remove it
To clean the cartridge first rinse under running water then soak overnight in vinegar

Step 3

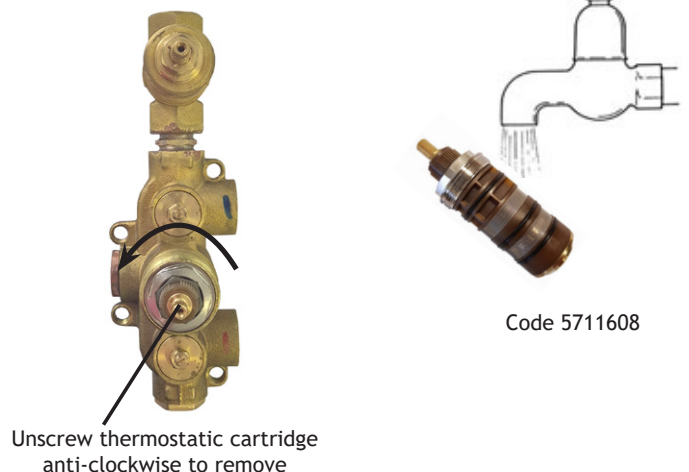


cont

ON-GOING MAINTENANCE continued


Step 4. Check inside valve body and remove any debris if required.
Re-rinse the cartridge under running water and replace the cartridge in valve body, use silicone grease as necessary and securely tighten turning nut clockwise

Step 4

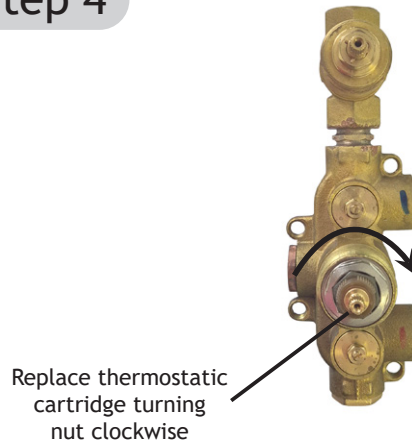


Step 5 Turn on the hot and cold water supply .

Step 5

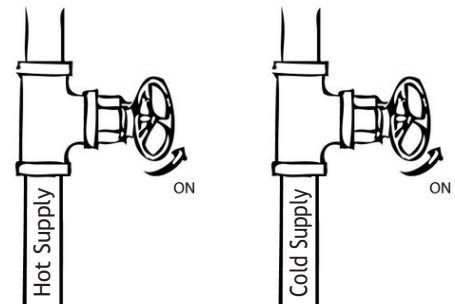

Step 6 Replace thermostatic cartridge sleeve
Re-set the temperature using the "Setting The Temperature" guide.

Step 6

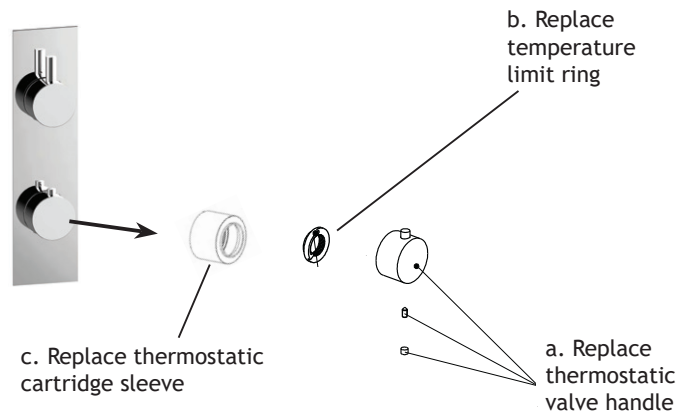

GENERAL CLEANING

1. We recommend that Cifal products are cleaned using a **soft damp cloth**, we strongly advise against using any cleaning products, either powders or liquids, as they may contain harmful chemicals which may damage the product.
2. Shower heads need to be regularly "rubbed" to prevent the build up of limescale on the outlet nozzles.