

Code: 600L35SE

## TECHNO 35

## 3 control landscape thermostatic valve with double diverter (5 outlets)

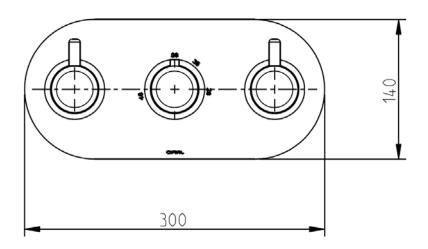

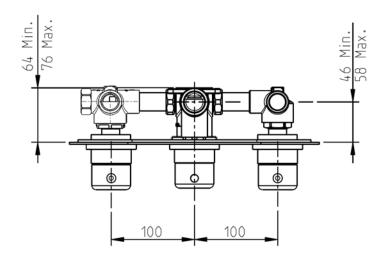


## 3580019.U Rough for 3 control concealed thermostatic valve - 5 Outlets check valve (x2) 5710253 diverter cartridge ART.PT.21 end cap & isolating valve (x2) 05.TP.44.CP protective cover 05.TP.06 protective cover 05.PZ.01 screws for protective cover (x2) diverter cartridge 05.VI.70 ART.PT.22 protective cover (x2) thermostatic cartridge 05.PZ.02 5711607 screws for screws for protective cover (x2) protective cover (x2) 05.VI.05 05.PG.39

# www.cifial.co.uk

#### **NOTES:**

- 1) The red dot on the temperature limit ring must be aligned with the number 38 on the backplate
- 2) valve rough 3580019.U pre-assembled at the factory

Installer: Please leave all leaflets with the building owner to file for future reference

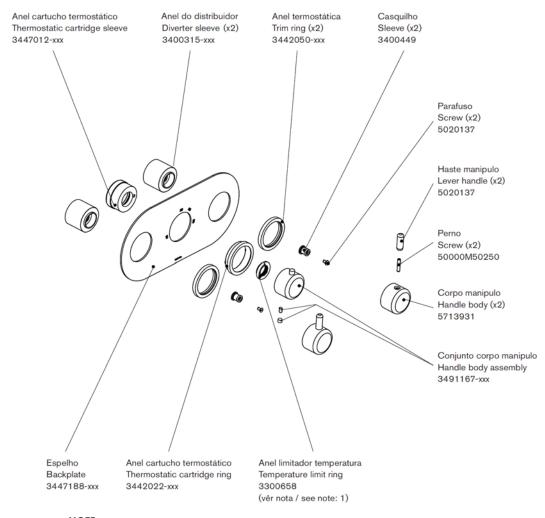

#### NOTE:

xxx represents different finishes

Code: 600L35SE

## **Operation**

#### Requires high pressure (minimum 1.5 bar)

Left Control = on/off and diverter combined

Lever upright = off

Lever anti clockwise = mixed water out of left outlet (medium flow) D

Lever clockwise = mixed water out of top outlet (high flow) V

Lever facing downwards = mixed water out of left outlet (low flow) D

NB: You cannot use any left outlets at same time

Middle Control = thermostat with temperature override

Right Control = on/off and diverter combined


Lever upright = off

Lever anti clockwise = mixed water out of left outlet (low flow) D Lever clockwise = mixed water out of bottom outlet (high flow) V

NB: You cannot use both right outlets at same time

#### Flow rates

		LEFT SIDE FLOW RATES		
	BAR	low flow outlet	high flow outlet	medium flow outlet
	1.5	10.7	18.2	16
• •	2	12.3	21	18.6
	3	15.5	25.7	22.9

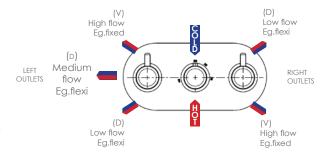

RIGHT SIDE FLOW RATES			
BAR	low flow outlet	high flow outlet	
1.5	10.7	18.2	
2	12.3	21	
3	15.5	25.7	

## Prior to use - Setting the temperature

- 1. With both flow controls in the off position, remove the thermostatic valve handle and the temperature limit ring.
- 2. Put back on the thermostatic valve handle and turn clockwise until the cartridge "clicks". This is now set at fully cold.
- 3. Turn on one of the flow controls and turn the thermostatic valve handle anti-clockwise until the desired temperature is reached, ie 38°C. Use a thermometer to check if the temperature is correct (Fig. A)
- 4. Turn off the flow control, remove the thermostatic valve handle and replace the temperature limit ring with the red dot in the 12 o'clock position, ie corresponding with the 38°C on the etched plate (Fig. B).
- 5. Replace the thermostatic valve handle with the temperature override button position just prior to the 38°C (Fig. C)
- 6. Your thermostatic valve is now ready for use

IMPORTANT: it is recommended that on a regular basis you rotate the thermostatic control handle between the maximum and minimum temperature limits by pressing the override button and with the water running. This way you prevent limestone incrustation that could build up and block the thermostatic cartridge.

Fig. A

 


Fig. B Red mark aligned with the mark 38°C.



Fig. C Temperature override button





www.cifial.co.uk cifialuk@btconnect.com