


INSTRUÇÕES DE INSTALAÇÃO INSTALLATION INSTRUCTIONS

Style 65 / Technovation 65

Termostática embutida 3 furos c/ inversor / 3 Holes 3/4" thermostatic valve with integral volume control and diverter

código/code | 35833SY-xxx

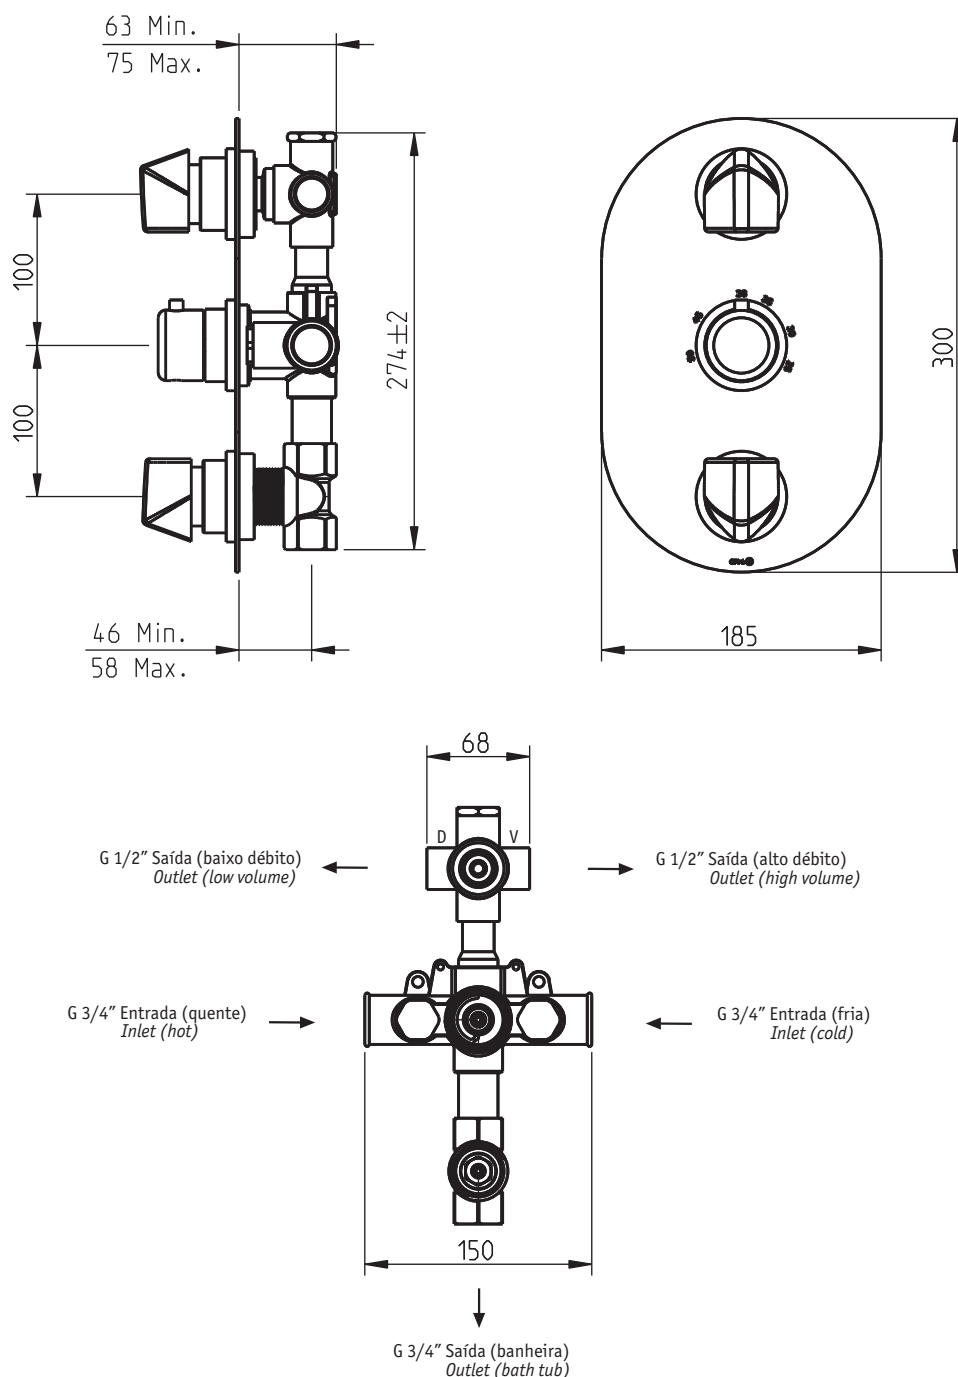

INSTALADOR / INSTALLER:

Por favor entregue todas as instruções que acompanham este produto ao seu proprietário.
Please leave all leaflets with the building owner to file for future reference.

5663544
983SY015D03

TORNEIRAS / PLUMBING

CIFIAL Torneiras, S.A.

Portugal T +351 256 780 700 F +351 256 780 710 cifial@cifial.pt www.cifial.pt

CIFIALDECOR, S.A.

Espanha T +34 916 110 261 F +34 916 103 694 cifialdecor@infonegocio.com


CIFIAL UK, Ltd.

UK P +44 1933 402 008 F +44 1933 402 063 sales@cifial.co.uk www.cifial.co.uk

CIFIAL USA

USA P +1800 5284904 F +1800 5281969 info@cifialusa.com www.cifialusa.com



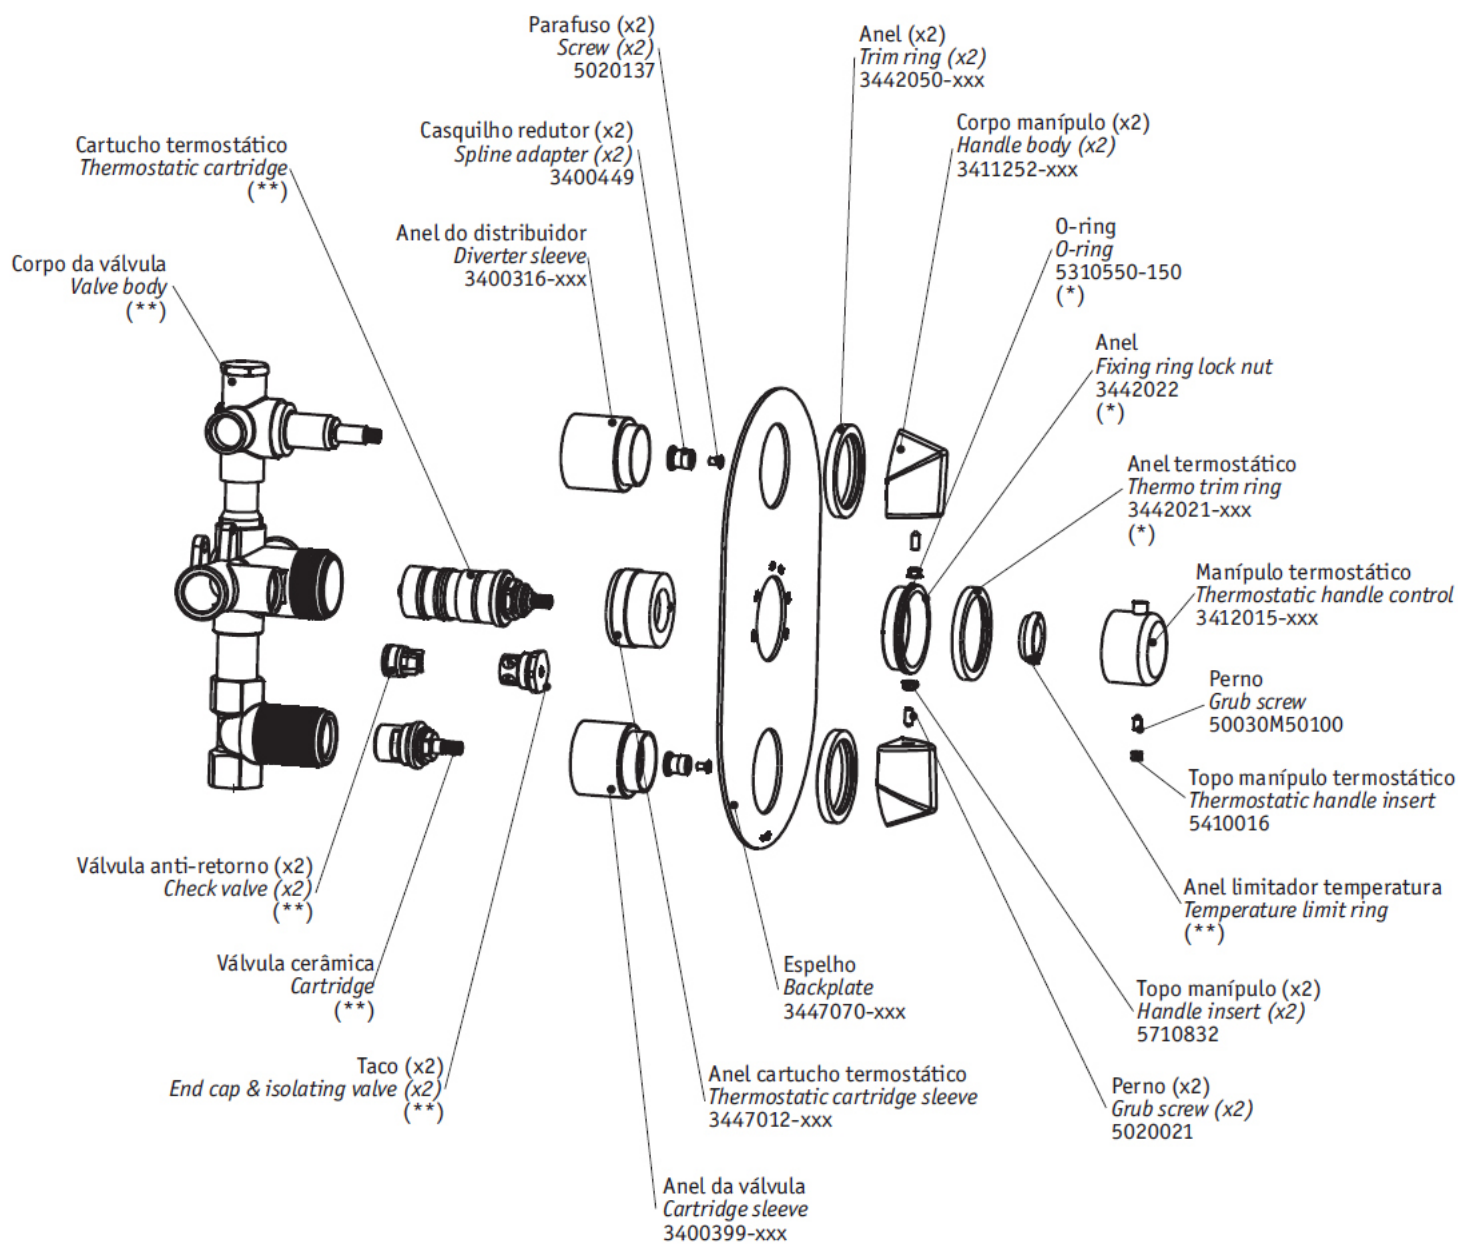

Notas / Notes: 1) Na instalação, alinhar o ponto vermelho do **anel limitador de temperatura** com o número 38 impresso no espelho.
*The red dot on the **temperature limit ring** must be aligned with the number 38 on the back plate.*

2) (*) Pré-montado na fábrica. / (*) *Pre-assembled at factory.*

3) (**) Conjunto pré-montado na fábrica - 5711017. / (**) *Kit 5711017 pre-assembled at factory.*

4) xxx indica o código do acabamento. / *xxx represent different finishes.*



CIFIAL

PRIOR TO USE

Setting the Temperature

- 1) With the stop valve (flow control) in the off position, remove the thermostatic valve handle and the temperature limit ring.
- 2) Put back on the thermostatic valve handle and turn clockwise until the cartridge 'clicks'. This is now set at fully cold.
- 3) Turn on stop valve and turn the thermostatic valve handle anti-clockwise until the desired temperature is reached, ie 38°C - use a thermometer to check the temperature is correct.
- 4) Turn off the stop valve, remove the thermostatic valve handle and replace the temperature limit ring with the red dot in the 12 o'clock position, ie corresponding with the 38°C on the etched plate.
- 5) Replace the thermostatic valve handle with the temperature override button position just prior to the 38°C
- 6) Your thermostatic valve is now ready for use.