

Code: 600V35SE

TECHNO 35

3 control thermostatic valve with double diverter (5 outlets)

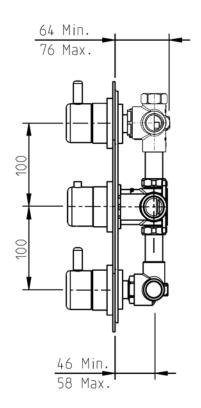

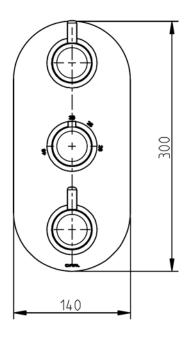


3580019.U Rough for 3 control concealed thermostatic valve - 5 Outlets diverter cartridge ART.PT.22 thermostatic cartridge 5711607 screws for protective cover 05.PG.39 (x2) end cap & (isolating valve 05.TP.44.CP (x2) check valve 5710253 (x2) protective cover 05.TP.06 protective cover diverter cartridge 05.VI.70 (x2) profective ART.PT.21 cover 05.PZ.01 protective cover screws for 05.PZ.02 (x2) protective cover 05.VI.05 (x2)

www.cifial.co.uk

NOTES:

- 1) The red dot on the temperature limit ring must be aligned with the number 38 on the backplate
- 2) valve rough 3580019.U pre-assembled at the factory

Installer: Please leave all leaflets with the building owner to file for future reference

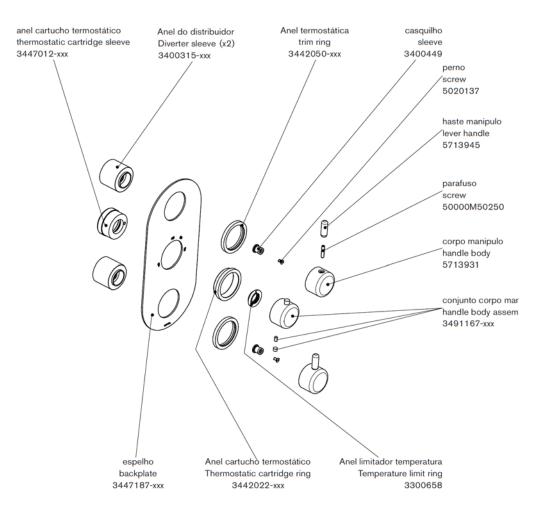

NOTE: xxx represents different finishes

Code: 600V35SE

Operation

Requires high pressure (minimum 1.5 bar)

= on/off and diverter combined

Lever upright = off

Lever anti clockwise = mixed water out of top outlet (medium flow) D Lever clockwise = mixed water out of right outlet (high flow) V Lever facing downwards = mixed water out of left outlet (low flow) D

NB: You cannot use any top outlets at same time

Middle Control = thermostat with temperature override

Bottom Control = on/off and diverter combined Lever facing downwards = off

Lever anti clockwise = mixed water out of right outlet (low flow) D Lever clockwise = mixed water out of right outlet (high flow) V

NB: You cannot use both bottom outlets at same time

Prior to use - Setting the temperature

- 1. With both flow controls in the off position, remove the thermostatic valve handle and the temperature limit ring.
- 2. Put back on the thermostatic valve handle and turn clockwise until the cartridge "clicks". This is now set at fully cold.
- 3. Turn on one of the flow controls and turn the thermostatic valve handle anticlockwise until the desired temperature is reached, ie 38°C. Use a thermometer to check if the temperature is correct (Fig. A)
- 4. Turn off the flow control, remove the thermostatic valve handle and replace the temperature limit ring with the red dot in the 12 o'clock position, ie corresponding with the 38°C on the etched plate (Fig. B).
- 5. Replace the thermostatic valve handle with the temperature override button position just prior to the 38°C (Fig. C)

Red mark aligned

6. Your thermostatic valve is now ready for use.



38°C/100°F

Fig. A



Fig. B


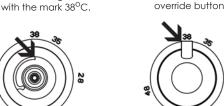


Fig. C

Temperature

Flow rates

| | TOP CONTROL FLOW RATES | | |
|-----|------------------------|------------------------|--------------------------|
| BAR | low flow outlet | high flow outlet | medium flow outlet |
| 1.5 | 10.7 | 18.2 | 16 |
| 2 | 12.3 | 21 | 18.6 |
| 3 | 15.5 | 25.7 | 22.9 |

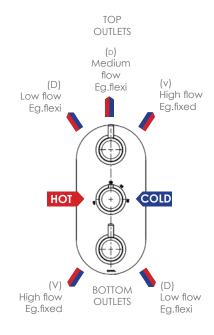

| BOTTOM CONTROL FLOW RATES | | | | |
|---------------------------|--------------------|---------------------|--|--|
| BAR | low flow outlet | high flow outlet | | |
| 1.5 | 10.7 | 18.2 | | |
| 2 | 12.3 | 21 | | |
| 3 | 15.5 | 25.7 | | |

IMPORTANT: it is recommended that on a regular basis you rotate the thermostatic control handle between the maximum and minimum temperature limits by pressing the override button and with the water running. This way you prevent limestone incrustation that could build up and block the thermostatic cartridge.



www.cifial.co.uk cifialuk@btconnect.com