


Waterfall Deck Spout

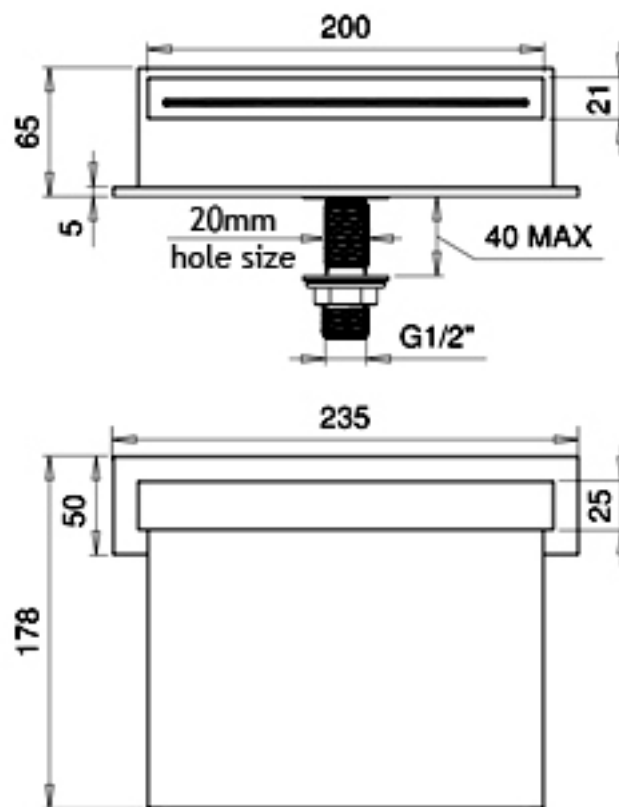


CONTENUTO SCATOLA:
COMPONENTS:
COMPONENTS:
COMPONENTES:
INHALT:

N° 1 SPINA D'ICENTRAGGIO
 CENTRING PIN
 CEVILLE DE CENTRGE



N° 2 GRANI M4x6
 SCREWS M4x6
 VIS M4x6
 TORNILLOS M4x6
 SCHRAUBEN M4x6



N° 1 CONTRODADO
 LOCKNUT
 CONTRE-ECROU
 CONTRATUERCA
 NUTMUTTER



N° 1 ANELLO SAGOMATO
 SHAPED RING
 BAGUE PROFILÉE
 ANILLO MODELADO



N° 2 SUPPORTI
 SUPPORT
 SUPPORT
 SOPORTE




N° 1 PERNO
 PIN
 PIVOT
 PERNIO




N° 2 GUARNIZIONI
 SEALS
 JOINTES
 JUNTAS
 SIEGELN




N° 1 PERNO DI FISSAGGIO
 MOUNTING PIN
 PIVOT DE FIXATION
 PERNIO DE FIJACION




N° 1 ROSONE
 CAP
 COUVERTURE
 TAPA
 TAMPA

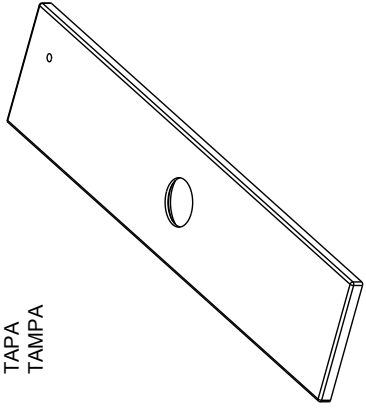


N° 1 BASE DI FISSAGGIO
 MOUNTING BASE
 BASE DE FIXATION
 BASES DE FIJACION
 MONTAGEBASIS

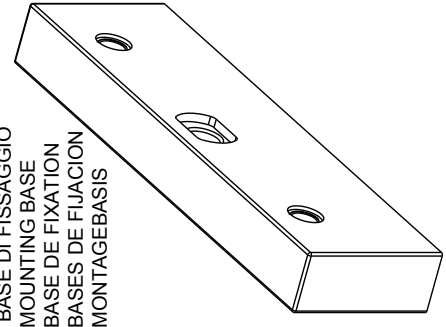

N° 1 CARTUCCIA DIFFUSORE
 CARTRIDGE
 CARTOUCHE
 CARTUCHO
 REGENBRAUSE

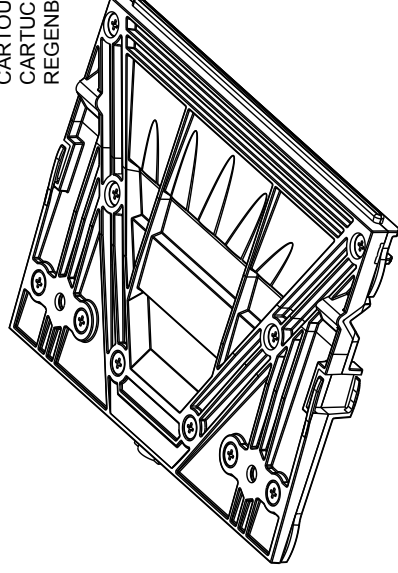

N° 1 CORPO ESTERNO
 EXTERNAL BODY
 CORPS EXTERNE
 CUERPO EXTERIOR
 EXTERNEKÖRPER

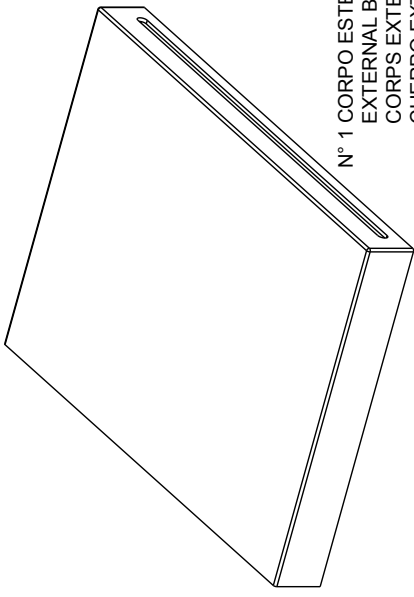




AVVERTENZE:
 Prima di installare il soffione è necessario
 spurgare in modo accurato le
 tubazioni di alimentazione

WARNING:
 The supplying pipes must be carefully
 cleaned before installing the showerhead.









AVVERTENZE:
 Avant de la mise en place du plafond de
 douche, il faut purger toutes les conduites
 d'alimentation.

NOTE:
 Die Verbindungsröhre sorgfältig putzen bevor die
 Installation der Kopfsbrause.

ADVERTENCIAS:
 Antes de conectar rociador es necesario purgar
 correctamente la instalación hidráulica de
 alimentación de cualquier impureza que pueda tener.

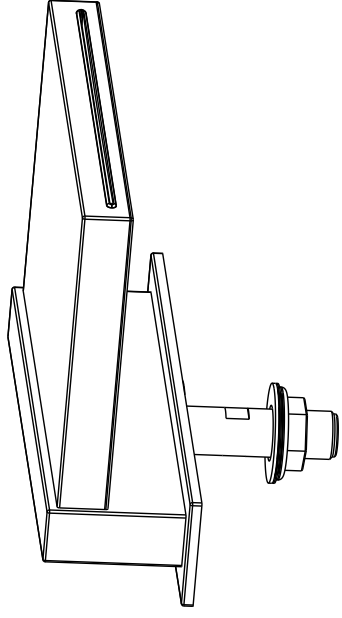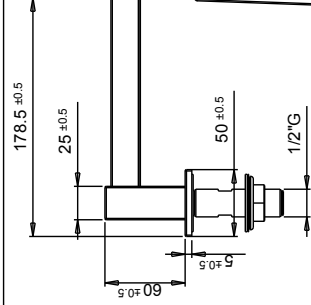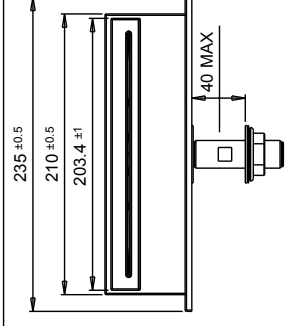

MONTAGGIO FINALE:
FINAL MOUNTING:
MONTAGE FINAL:
MONTAJE FINAL:
FINAL MONTAGE:

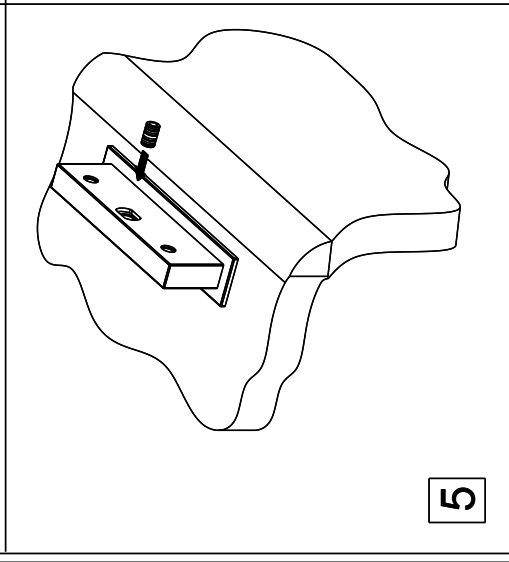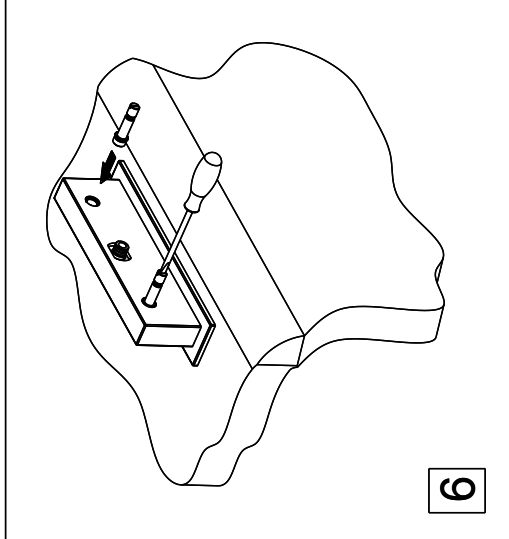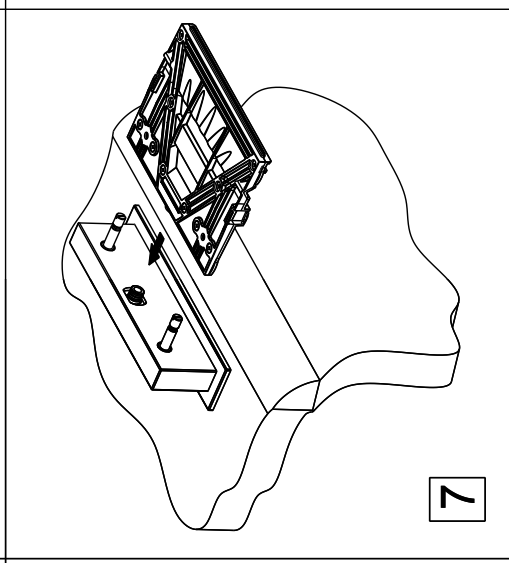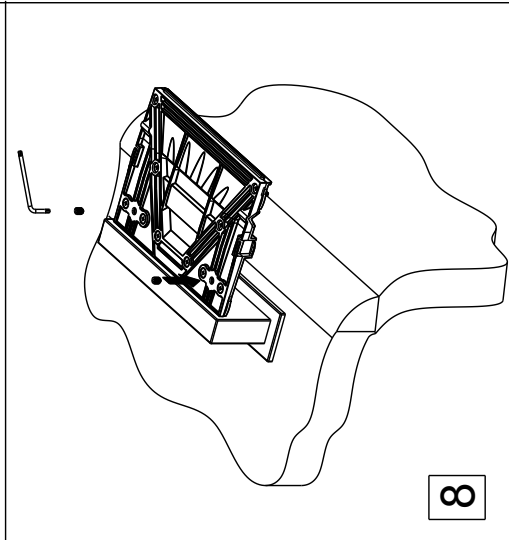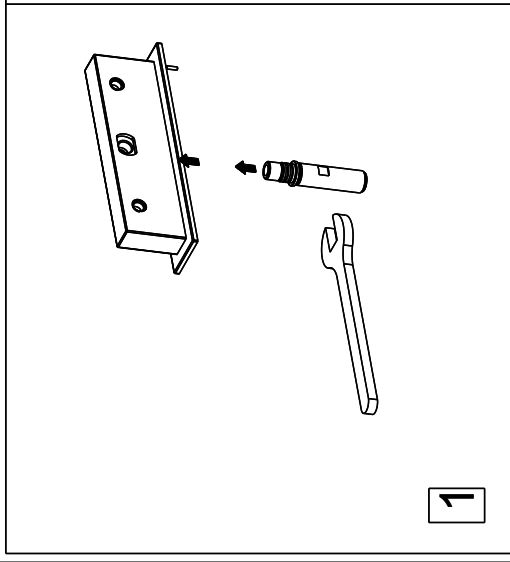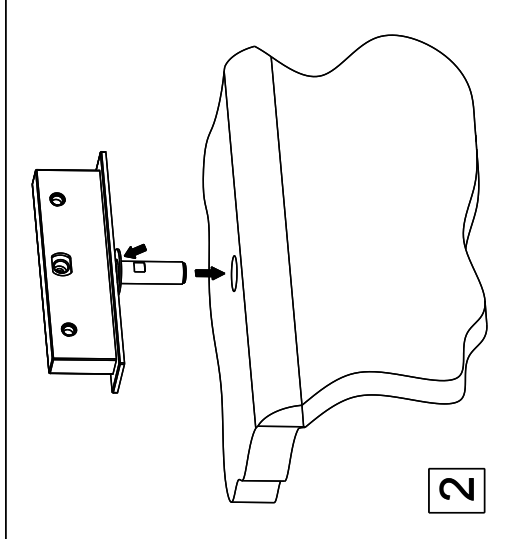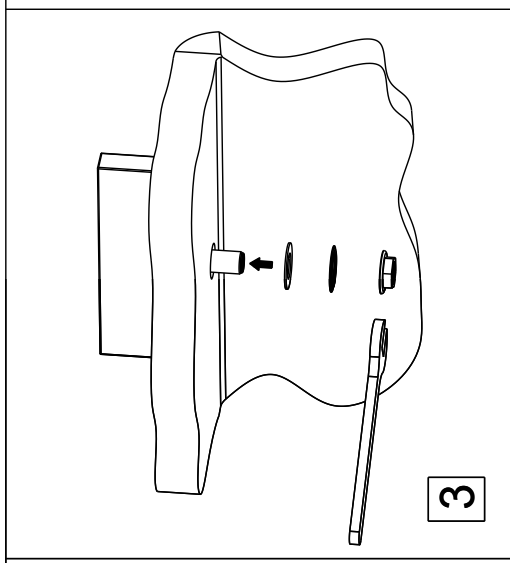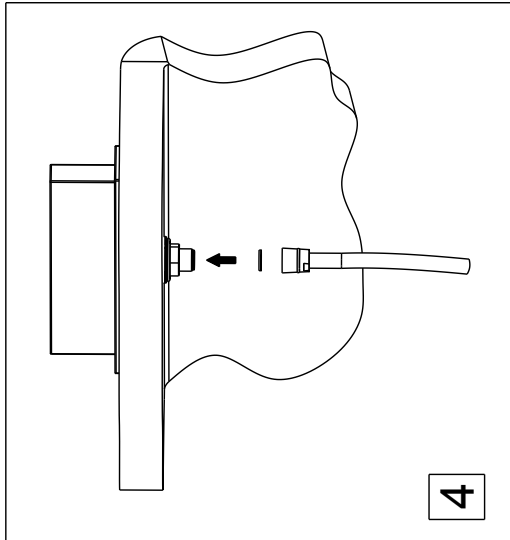

Installation

Code: 1966058

CIFIAL

www.cifial.co.uk
cifialuk@btconnect.com

