

Monet & Gaugin

TECHNICAL SPECIFICATIONS

- Valve type: 3/4" ceramic disc valve 3/4 turn
tested to 500,000 cycles.

- PRESSURE

Minimum working pressure	0.2 bar
Recommended working pressure	1 - 5 bar
Maximum working pressure	10 bar
Test pressure	16 bar

WHERE INLET PRESSURE EXCEEDS
5 bar FIT PRESSURE REDUCING VALVE


These valves are designed to work on balanced pressure supplies and are suitable for use with tank feed supplies, combination Boiler/Multipoint supplies or supplies from direct mains feed systems.

Subject to minimum/maximum pressure requirements as above

- TEMPERATURE


Minimum working temperature	1°C
Maximum (at hot water inlet)	85°C
Recommended temperature range	5°C - 60°C

- FLOW RATE

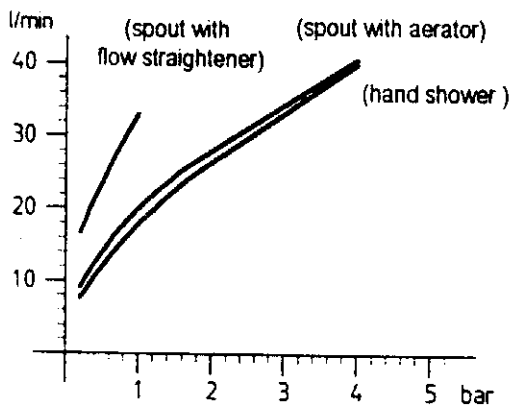

IF THE PRESSURE IS HIGHER THAN 1 bar
REMOVE FLOW STRAIGHTENER AND REPLACE
WITH AERATOR PROVIDED

To exchange aerator/ flow straightener unscrew the housing (23 1) from the spout, change the innerpart (flow straightener)(23 2) by the aerator supplied and re-assemble ensuring that washer (23.3) is in the correct position

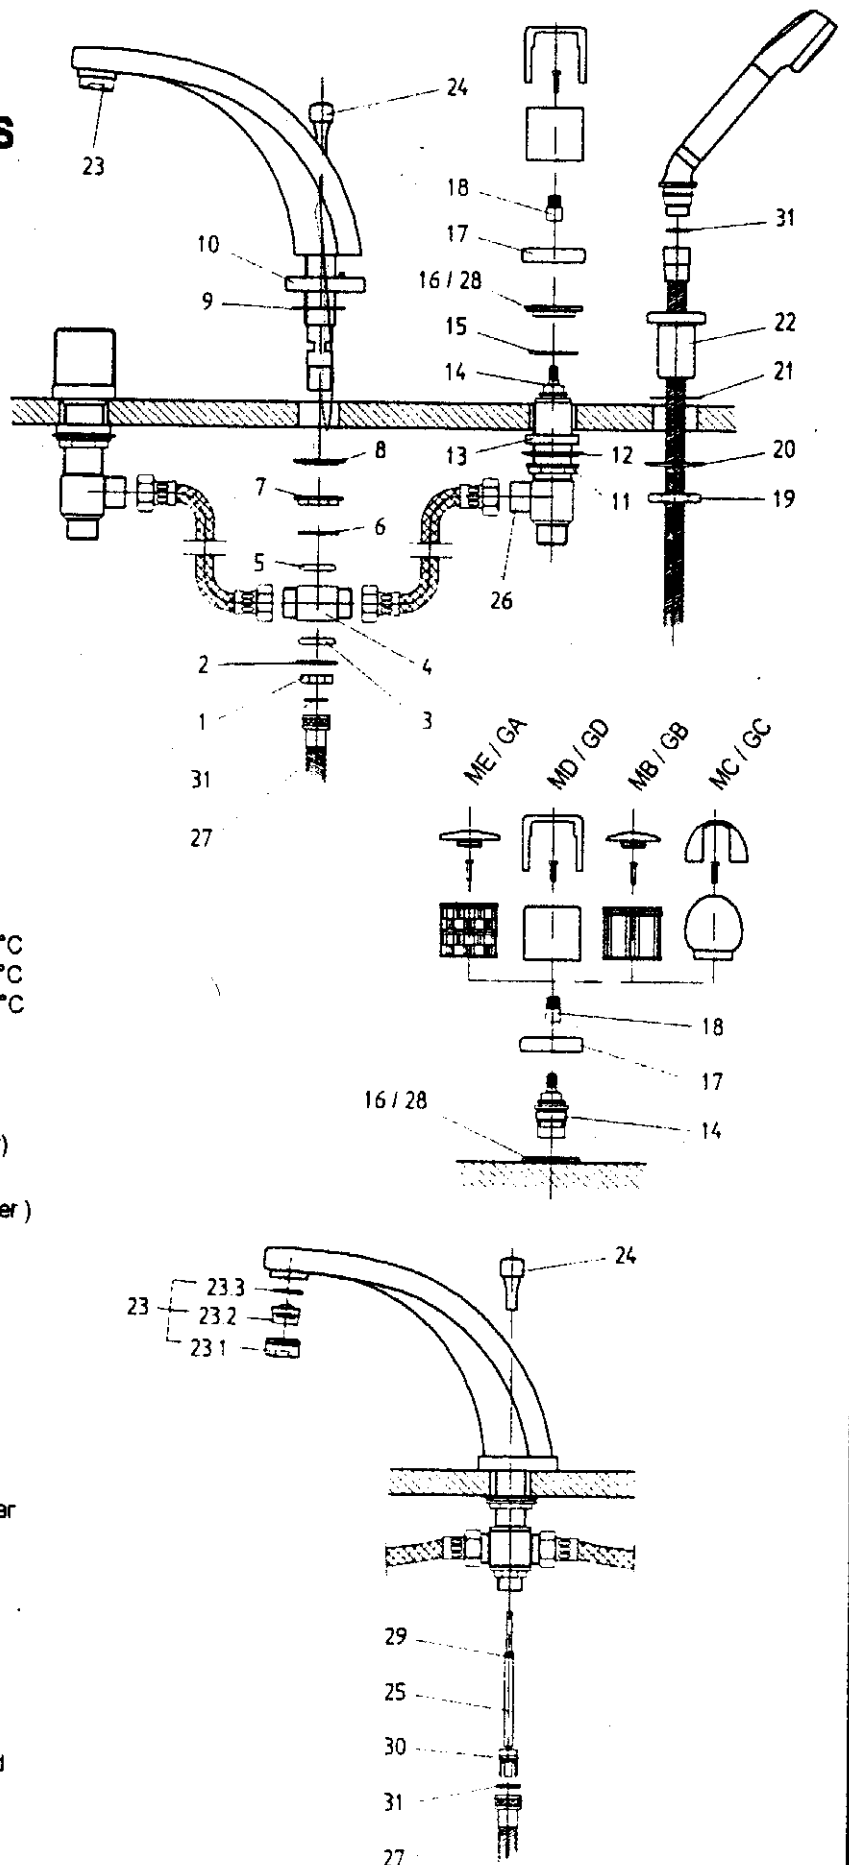

Congratulations on your purchase of a CIFIAL product.

To ensure that this product gives you satisfaction over many years, please follow the simple instructions detailed here

INSTALLATION INSTRUCTIONS

1. Ensure that supply requirements with regard to pressure and temperature are complied with (See technical specifications)
2. The bath should be drilled with two holes for valves (38 mm Dia), one for pull up shower set (35 mm Dia) and one for the spout (30 mm Dia) Check carefully that no holes are drilled in such a position as to foul on any other unmovable fitting on the bath (e.g. Overflow fitting)
3. Remove 1/2" backnut (1) at base of diverter assembly on the spout. Remove lower brass washer (2), diverter tee assembly (4) and upper brass washer (6) from base of spout. Remove 3/4" backnut (7) and dished washer (8). Locate spout into hole in bath, ensuring that base plate (10) and rubber washer (9) are correctly located. Re-fit dished washer and backnut and tighten securely. Re-assemble diverter tee assembly in reverse order ensuring that O-rings (3) and (5) are properly located on diverter tee. Tighten backnut (1) fully, ensuring that inlet connections of diverter tee as facing along bath towards valves
4. Loosen backnuts (11) on valve bodies, fit dished washer (12) (raised edge of dished washer to face upward towards bath) and, if the thickness of the deck is less than 5 mm, fit brass ring (13). Feed valve bodies through bath from underside. Fit O-ring (15) and screw locknut (16) to valve bodies from above the bath and tighten securely. Tighten backnuts (11) compressing dished washer (12) to underside of bath ensuring that outlet connections (26) face towards diverter tee on spout. Connect flexible hoses between valve outlets (26) and inlet connections on diverter tee assembly (4) once again ensuring correct sealing of washers (See position of hoses in the cover drawing of these instructions)
5. Fit shower escutcheon (22) and rubber seal (21) through bath. Place dished washer (20) over thread under the bath, fit and tighten backnut (19). Connect knurled end of shower hose (27) to thread under base of diverter tee with rubber washer (31) provided. Feed conical end of hose through escutcheon (22) from below bath and attach to thread at end of shower handset.
6. Fit decorative bases (17) on the locknut (16), fixed by O-ring (28). Fit spindle extensions (18) to spindles on valves. Remove decorative insert from handwheel, locate handwheel to spindle extension and tighten screw. Re-fit decorative insert

YOUR MIXER IS NOW READY FOR PLUMBING CONNECTIONS

7. Fit 3/4" FBSP tap connectors (Not Supplied) to ends of copper tube, then to male ends of valve tails with fibre, rubber or PTFE washers.
8. Push the diverter knob (24) down. Thus the water will emerge from the bath filler.
Note: Pulling diverter up, the water will changeover from bath filler to shower outlet
9. Remove aerator or straightener (23) before opening isolation valves to test supplies and flush pipework. Check both supply and waste connections for leakage and flush through thoroughly to remove any sediment from the system. Refit aerator or flow straightener.

MAINTENANCE INSTRUCTIONS

1. Cleaning:

Clean the product with warm soapy water and a soft cloth. Light deposits of scale can be removed by washing with a diluted solution of vinegar and water in equal parts. Rinse with tepid clean water and dry with a soft cloth.

Never use acid or abrasive cleaning materials.

Periodically the aerator in the mixer spout should be cleaned to remove deposits of scale. Unscrew the aerator (23) from the spout and dismantle. Open the cold tap and rinse the pieces of the aerator under the running water, using a soft brush if necessary then re-assemble and re-fit the aerator.

Do not clean any plastic pieces with products containing alcohol, acetone or any disinfectants.

2. Valve Maintenance

Turn off hot and cold water supply. Check it is off by opening the mixer

To access the valve body, pull up and off the decorative piece of the tap handwheel, remove the now exposed screw thereby enabling removal of the main section of the handwheel. Pull up and off the decorative base (17). Unscrew the large hexagon section of the valve body (14). Flush through thoroughly and re-fit. **do not** disassemble. Re-fit ensuring the extension (18) is correctly located. For further information contact Cifial (UK)

3. Diverter

Turn off hot and cold water supply. Unscrew knurled end of shower hose (27) and diverter knob (24) on spout. Remove the diverter (25), pushing it down with a thin screw-driver. Clean and check the diverter and O-rings (29) and (30) renew if necessary. Re-fit diverter, shower hose and diverter knob. A free space of 250 mm need to be available below the spout

4. Finish Protection

If the mixer is fitted in an area not frequently used, ensure that evaporation does not cause the water level in the trap to diminish as the fumes from the drain can be harmful to plated finishes, simply run the tap once a week for a few seconds